

# 75A Input/Outputs

15A Outputs

Aux Batt +  
 Aux Batt -  
 (Shunt)


Start Batt +  
 Start Batt -

DC-DC In/  
 Start Batt +

DC-DC In/  
 Solar +

DC-DC  
 Ground -

DC-DC  
 Aux Batt +

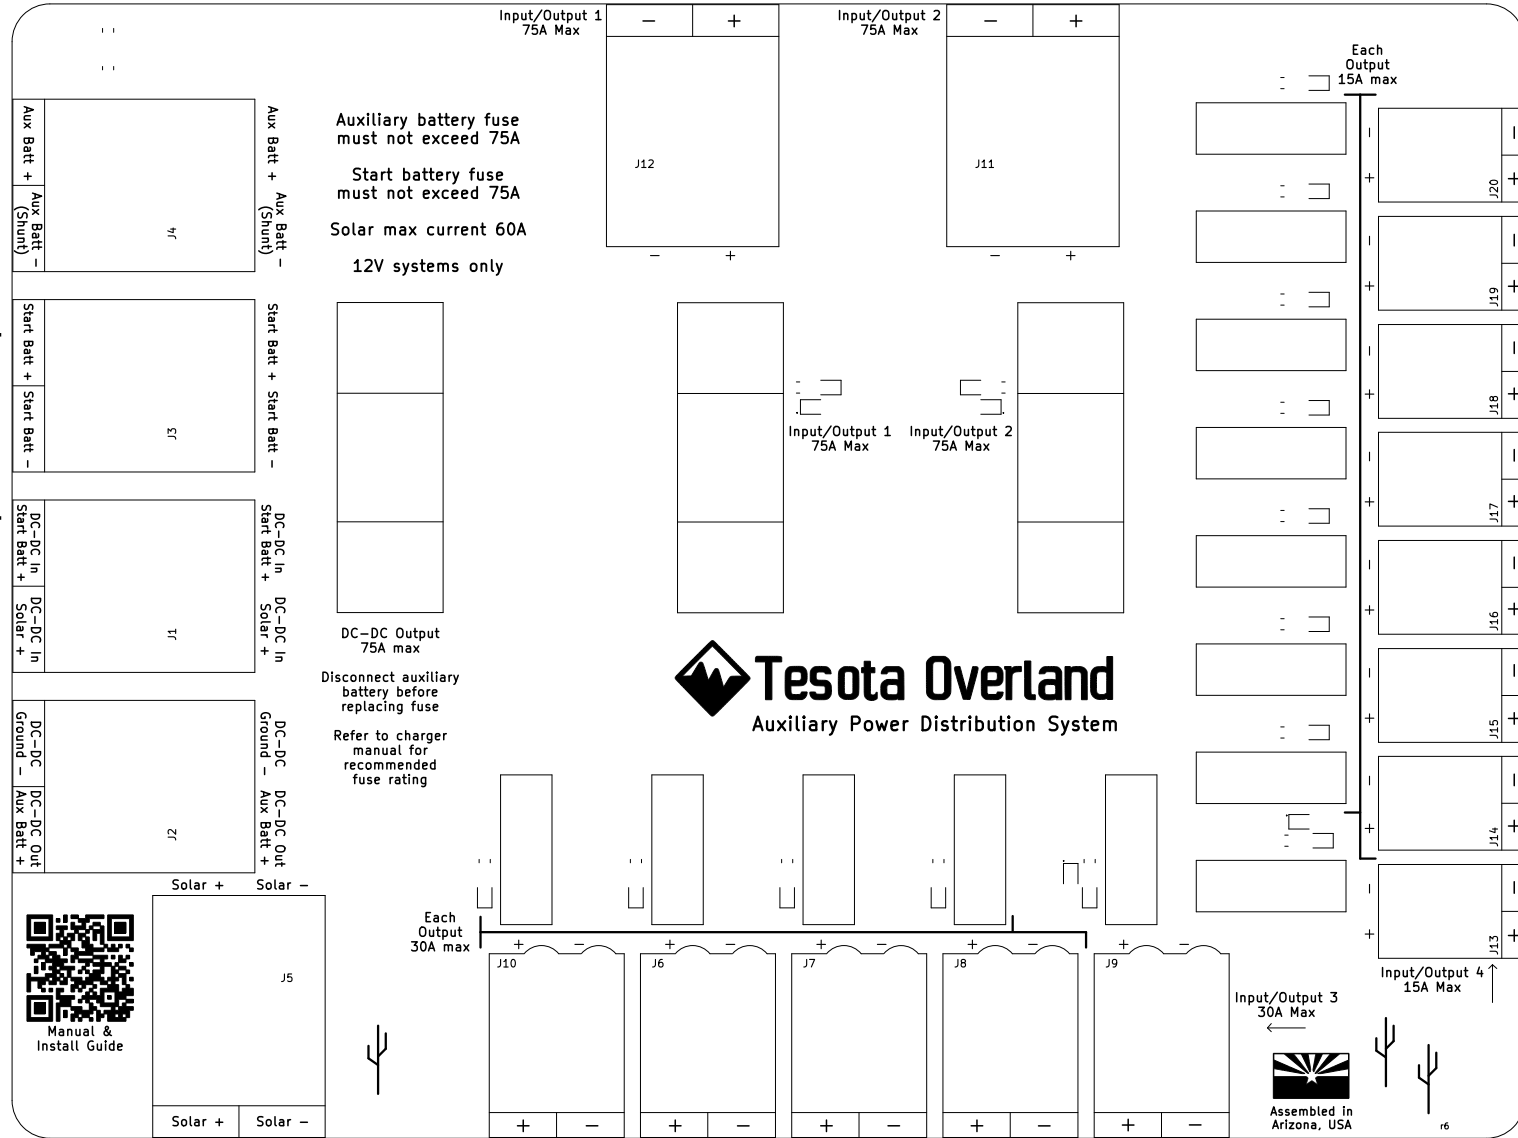

Auxiliary battery fuse  
 must not exceed 75A

Start battery fuse  
 must not exceed 75A

Solar max current 60A  
 12V systems only

DC-DC Output  
 75A max

Disconnect auxiliary  
 battery before  
 replacing fuse

Refer to charger  
 manual for  
 recommended  
 fuse rating

Solar +  
 Solar -

30A Outputs

Input/Output 3  
 30A Max

Input/Output 4  
 15A Max

Assembled in  
 Arizona, USA